
1. PRODUCT OVERVIEW

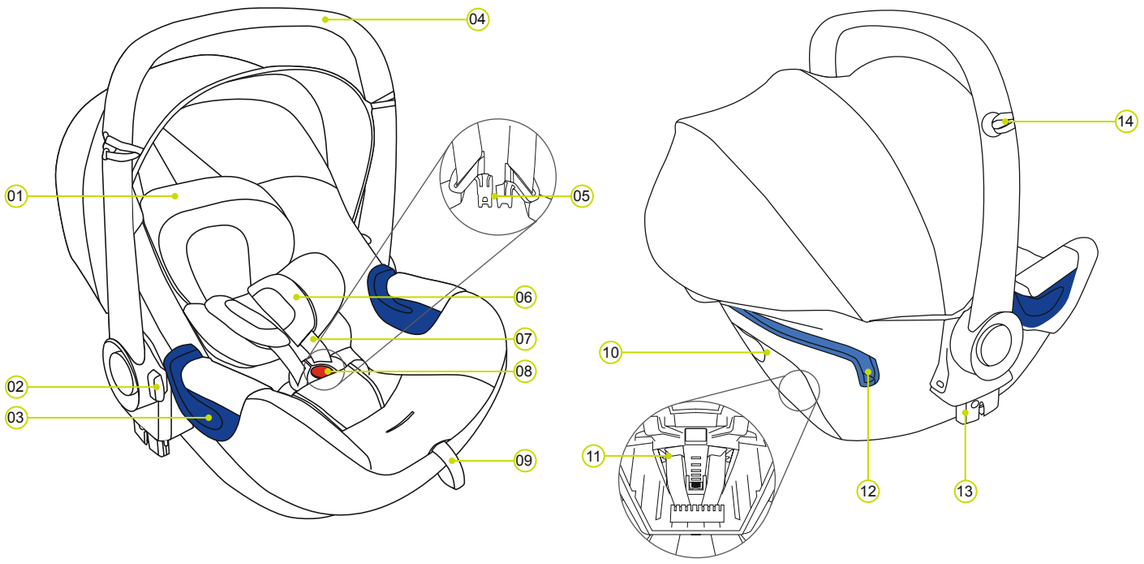

01 Headrest
02 Buttons
03 Belt guides
04 Handle
05 Buckle tongues
06 Shoulder pad
07 Shoulder straps
08 Harness buckle
09 Belt end
10 Instruction compartment
11 Belt slots
12 Belt holder
13 Adapter
14 Sunshade hook

2. INTRODUCTION

We are pleased that our **BABY-SAFE i-SIZE** may accompany your child safely through the first months of his or her life.

In order to protect your child correctly, the BABY-SAFE i-SIZE must always be used and installed as described in these user instructions. Please read the user instructions carefully before you use the BABY-SAFE i-SIZE for the first time, and keep these instructions in the space provided on the infant carrier.

If you have any further questions regarding the use of the carrier, please feel free to contact us:

Britax Childcare
Britax Römer
Kindersicherheit GmbH
Theodor-Heuss-Straße 9
D-89340 Leipheim
Germany
T.: +49 (0) 8221 3670-199/-299
F.: +49 (0) 8221 3670-210
E.: service.de@britax.com
www.britax.com


Britax Childcare
Britax Exelsior Limited
1 Churchill Way West
Andover
Hampshire SP10 3UW
United Kingdom
T.: +44 (0) 1264 333343
F.: +44 (0) 1264 334146
E.: service.uk@britax.com
www.britax.com

These instructions use the following symbols stated below:

Symbol	Keyword	Explanation
⚠	**DANGER!**	Risk of severe personal injury
⚠	**WARNING!**	Risk of minor personal injury
⚠	**CAUTION!**	Risk of material damage
ⓘ	**TIP:**	Useful notes

Instructions that follow a set sequence are numbered.
Example:
1. Press the button...

Belt guide colours
For better differentiation, the two vehicle seat belts are highlighted in different colours. The diagonal strap (16) in light blue and the lap belt (17) in dark blue. The colours of the belt guides on the child safety seat follow the same colour scheme.

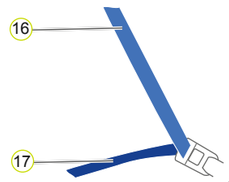

3. CERTIFCATION

The **BABY-SAFE i-SIZE** is exclusively intended to secure your baby in your vehicle.

BRITAX RÖMER child safety seat	Tested and certified according to ECE* R 129/00	
	Body size	Body weight
BABY-SAFE i-SIZE	40 - 83 cm	≤ 13 kg

*ECE = European Standard for Child Safety Equipment


The infant carrier has been designed, tested and certified according to the requirements of the European Standard for Child Safety Equipment (ECE R129/00). The seal of approval "E" (in a circle) and the approval number are located on the orange approval label (sticker on the child safety seat).

⚠ **DANGER!** The infant carrier must not be used with any base stations other than those listed in chapter "4. USE IN THE VEHICLE".

⚠ **DANGER!** This certification will be invalidated if you make any modifications to the child safety seat. Only the manufacturer is permitted to make modifications to the child safety seat. Unauthorised technical changes can cause the protective function of the seat to be reduced or completely eliminated. Do not make any technical changes to the infant carrier.

⚠ **WARNING!** Use the **BABY-SAFE i-SIZE** exclusively for securing your child in your vehicle. It must never be used as a seat or toy in the home.

⚠ **DANGER!** Never secure your child or the child safety seat with a 2-point belt. If you secure your child in the child seat with only a 2-point belt, then in the event of an accident this may cause serious injuries to your child, possibly resulting in death.

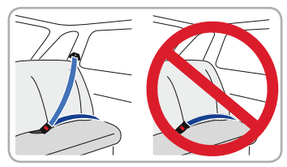

4. USE IN THE VEHICLE

Please observe the instructions for using children's restraining systems in the operating instructions of your vehicle.

Please refer to **the operating instructions for your vehicle for information about vehicle seats** which are certified for the use of children's restraining systems according to ECE R16.


Usage options for the BABY-SAFE i-SIZE:

BRITAX RÖMER child safety seat	**Vehicle seating position**	
	i-Size	Not i-Size
BABY-SAFE i-SIZE	✓	✓

You can also use the **BABY-SAFE i-SIZE** in combination with the **BABY-SAFE i-SIZE BASE/ FLEX BASE** (available as an accessory) as an **i-Size** approved product. The bases make it easier to fit the seat in and remove it from your vehicle safely. The **BABY-SAFE i-SIZE FLEX BASE** also makes it possible to adjust the angle of the infant carrier.

You can use your child safety seat as follows:

In the direction of travel	No
Against the direction of travel	Yes
With 2-point belt	No
With 3-point belt[1)]	Yes
On front passenger seat	Yes [2)]
On outer rear seat	Yes
On centre rear seat (with 3-point belt)	Yes [3)]

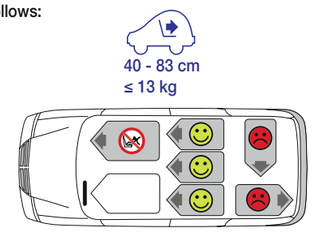


1) The safety belt must be approved to ECE R 16 or a comparable standard (see test label on belt with an "E" or "e" in a circle).
2) The front airbag must be deactivated. Observe the instructions in the vehicle owner's manual.
3) Cannot be used if the vehicle seat is equipped with only a 2-point belt.

5. CARE AND MAINTENANCE

Please ensure that you only use the original BRITAX RÖMER replacement seat covers, as the seat cover is an integral part of the child safety seat and fulfils important functions to ensure the smooth operation of the system. Replacement seat covers are available from your dealer.

- The plastic parts can be cleaned using soapy water. Do not use harsh cleaning agents (such as solvents).

⚠ **DANGER!** The infant carrier must not be used without the seat cover.

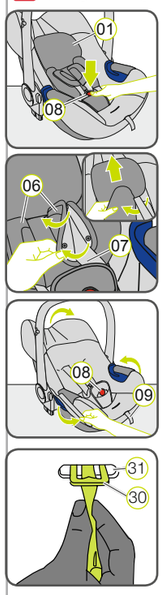

Removing the seat cover

1. Remove the sunshade (see chapter 8.5).
2. Open the harness buckle (08) (press the red release button).
3. Release the fasteners on the shoulder pads (06).
4. Pull the part of the headrest cover under the shoulder straps (07) upwards .
5. Pull the cover upwards off the headrest (01).
6. Unhook the plastic strips from underneath the edge of the infant carrier on all sides.
7. Pull the belt end (09) out of the cover.
8. Remove the cover.

▶ The cover can now be washed. Please observe the instructions on the washing label of the cover.

⚠ Remove the back of the new born insert before washing , this must not be washed:

Removing and cleaning the harness buckle

1. Tip the infant carrier backwards.
2. Push the metal plate (30), with which the harness buckle is fixed to the seat shell, on its side upwards through the belt slot (31).
3. Soak the buckle (08) in warm water with dishwashing liquid for at least an hour. Rinse and dry thoroughly.


Fitting the harness buckle:

1. Push the metal plate (30) on its side downwards through the belt slot (31) in the cover and through the seat shell. Pay attention to the direction.
2. Check for correct fitting by pulling firmly on the harness buckle (08).


Re-fitting the cover
Proceed in reverse order to re-fit the cover.

6. DISASSEMBLY/DISPOSAL


REMOVAL:

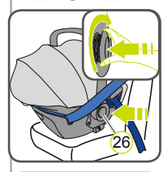

1. Rotate the SICT (26) all the way back in a clockwise direction.

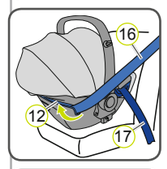

2. Unhook the diagonal strap (16) from the light blue belt holder (12).

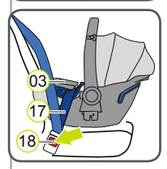

3. Open the vehicle seat buckle (18) and take the lap belt section (17) out of the dark blue belt guides (03).

▶ The infant carrier can now be removed.

⚠ **DANGER!** The infant carrier must always be secured when it is in the vehicle, even if no child is being transported.

DISPOSAL:

Please observe the waste disposal regulations in your country.

Disposal of packaging	Container for cardboard boxes
Seat cover	Residual waste, thermal utilisation
Plastic parts	According to the labelling in the corresponding container
Metal parts	Container for metals
Belt straps	Container for polyester
Buckle and tongue	Residual waste


40 cm - 83 cm
≤ 13 kg

britax

BABY-SAFE i-SIZE

GB

User instructions

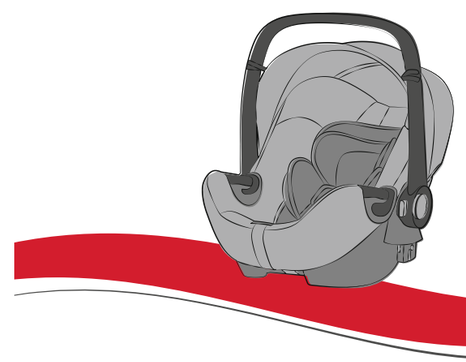

2000024706 01/17

www.britax.com

PAGE II

7. SAFETY NOTES

⚠ Please take the time to read these instructions carefully and keep them to hand in the designated compartment (10) in the infant carrier at all times! The instructions must be kept with the child safety seat if the latter is passed on to a third party.

⚠ DANGER! For the protection of your child:

- In the event of an accident with a collision speed of more than 10 km/h, the infant carrier may be damaged without the damage becoming immediately visible. In this case the infant carrier must be replaced. Please dispose of it properly.
- As a rule, have your infant carrier checked if it was damaged (e.g if it falls on the ground).
- Regularly check all important parts for damage. Ensure that all mechanical parts, in particular, are fully functional.
- Never lubricate or oil parts of the infant carrier.
- Never leave your baby unattended in the infant carrier in the vehicle.
- Always secure your baby in the infant carrier using the seat belt.
- Never leave your baby unattended in the infant carrier on raised surfaces (e.g. changing unit, table, sofa).
- Protect the infant carrier from intensive direct sunlight (e.g. cover with a lightweight cloth) when it is not in use. The infant carrier can get very hot in direct sunlight. Children's skin is sensitive and could be harmed.
- The more snugly the belt fits over your child's body, the better they will be protected. Therefore, avoid putting thick clothes on your child under the belt.
- The infant carrier is not intended to hold your baby for long periods of time. The semi-recumbent position in the infant carrier will always put a strain on your baby's spine. Take your baby out of the infant carrier as often as possible – this includes interrupting long car rides. Do not keep your baby in the infant carrier once it has been removed from the car.
- Lock the backrests of the vehicle seats (for example, engage the latch on the foldable rear seat bench).
- Never try to secure a baby on your lap with the vehicle seat belt or by holding onto them.

⚠ DANGER! For the protection of all vehicle occupants:

In the case of an emergency stop or an accident, unsecured persons or objects may cause injury to other vehicle occupants. Please always check that...

- all heavy or sharp-edged objects in the vehicle (e.g. on the parcel shelf) are secured.
- all persons in the vehicle have their seatbelts fastened.
- the infant carrier is always secured when it is in the vehicle, even if no child is being transported.

⚠ WARNING! For your protection when handling the child seat:

- To avoid damage, ensure that the infant carrier is not jammed in between hard objects (car door, seat rails, etc.).
- Make sure that the bottom end of the belt does not get stuck anywhere (e.g. in doors, escalators, etc.) as this could cause the infant carrier to fall.
- Keep the infant carrier in a safe place when it is not in use. Do not place any heavy objects on the seat and do not store it directly next to sources of heat or in direct sunlight.


⚠ CAUTION! To protect your vehicle:

- Certain car seat covers made from more sensitive materials (e.g. velour, leather, etc.) may sustain signs of wear and tear when using child safety seats. For optimum protection of your car seat covers, we recommend using the BRITAX RÖMER car seat protector from our range of accessories.


8. USE

8.1 ADJUSTING THE HANDLE

You can engage the handle (04) in three positions: A, B and C:

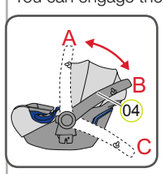

Handle positions:
A - For carrying and for transport in your car.
B - For placing your baby into the infant carrier.
C - For setting the infant carrier down safely outside the car.

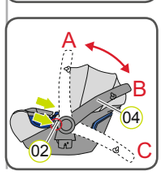

To adjust the handle:
1. Press and hold both buttons (02) on the handle (04) at the same time.
2. Pivot the handle (04) with the buttons pressed (02) until it is in the desired position.
3. Release the buttons (02) and make sure that the handle (04) is engaged properly.

8.2 USING THE SEAT INSERT


Use the seat insert when your baby is still very small. The foam blocks can be removed for use with larger babies.





To fit the insert:
1. Open the harness buckle (08) (press the red release button).
2. Place the insert (19) into the infant carrier. The part filled with the foam blocks must be facing downwards.
3. Thread the lower part of the insert underneath the shoulder straps (07). Make sure that the insert (19) is in contact with the backrest of the infant carrier.

8.3 ADJUSTING THE HEIGHT OF THE SHOULDER STRAPS

A properly installed headrest (01) ensures optimal protection for your child in the child seat. The headrest (01) must be adjusted so that the outlet slots for the shoulder straps (07) are about two finger widths (25 mm) below the height of your child's shoulders.

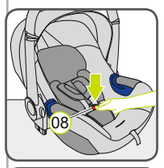

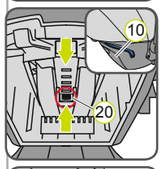

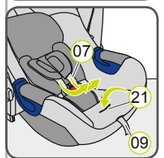


Adjusting the shoulder straps:
1. Open the harness buckle (08) (press the red release button).
2. Open the instruction compartment (10) on the rear side of the infant carrier.
3. Place the headrest (01) in the right position by pressing and moving the adjustment button for the shoulder straps (20). (The headrest (01) must be adjusted so that the outlet slots for the shoulder straps (07) are about two finger widths (25 mm) below the height of your child's shoulders.)
4. Make sure that the adjustment button for the shoulder straps is properly engaged (20).
5. Close the instruction compartment (10) again.


To loosen the shoulder straps:
Press the adjustment button (21) and at the same time pull both shoulder straps (07) forward.

To tighten the shoulder straps:
Pull the strap end (09). Make sure that you pull the strap end (09) straight out and not upwards or downwards.

8.4 STRAPPING YOUR BABY IN

The BRITAX RÖMER BABY-SAFE i-SIZE provides your baby with optimum safety when the shoulder straps fit as snugly as possible over the body without constricting the baby.

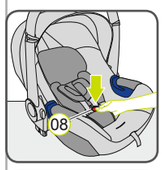


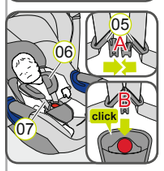


To strap in your baby
1. Loosen the shoulder straps (07) (as described in chapter 8.3 ADJUSTING THE HEIGHT OF THE SHOULDER STRAPS).
2. Open the harness buckle (08) (press the red release button).
3. Put the shoulder straps (07) over the shoulders of your baby.
   ⚠ **WARNING!** Do not twist or swap the shoulder straps, as this will invalidate the protective function.
4. Put the two buckle tongues (05) together.
5. Engage the buckle tongues (05) so that they make an audible clicking sound.
6. Tighten the shoulder straps (07) until they fit snugly over your baby's body (as described in chapter 8.3 ADJUSTING THE HEIGHT OF THE SHOULDER STRAPS).
   ⚠ **WARNING!** The hip belt must lie as low as possible over your baby's groin.

8.5 USING THE SUNSHADE

The sunshade (28) protects your baby's head from sunlight. It can be easily folded up and down on the handle (04). To remove or attach the sunshade (28), proceed as follows:

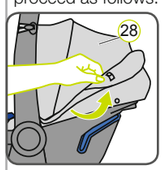

REMOVING THE SUNSHADE
1. Remove the sunshade (28) at the head end of the infant carrier. To do this, release the fasteners at the side and remove the elastic seam.
2. Unhook the cover loops (15) on both sides of the handle from the sunshade hooks (14).

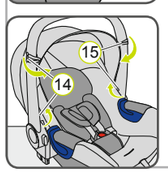

FITTING THE SUNSHADE
1. Hook the cover loops (15), on the right and left of the handle, into the sunshade hooks (14).
2. Pull the elastic seam over the head end of the infant carrier. Secure the elastic seam at the side with the fasteners.


9. INSTALLATION IN THE VEHICLE


Before securing the infant carrier in the vehicle, secure your baby in the infant carrier as described in chapter 8.4 STRAPPING YOUR BABY IN.




⚠ DANGER! An airbag hitting the infant carrier can cause serious injuries to your baby, possibly resulting in death.
Do **not** use the infant carrier on passenger seats with activated front airbags! For seats with side airbags, please observe the instructions in your owner's manual.




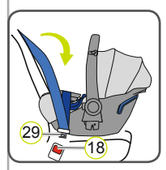

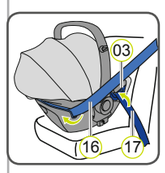

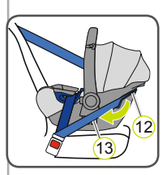



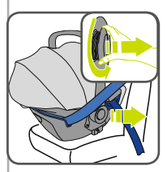

1. Choose a suitable position in the vehicle according to the overview table in chapter 4. USE IN THE VEHICLE.
2. Place the infant carrier rearward-facing on the vehicle seat (baby is facing backwards).
3. Ensure that the handle (04) is in the upper position A.
4. Pull out the vehicle seat belt and place it across the infant carrier.
5. Engage the buckle tongue (29) in the vehicle seat buckle (18).
6. Place the lap belt section (17) in the belt guides (03) on both sides of the infant carrier. Make sure that you do not twist the lap belt section (17).
7. Tighten the lap belt section (17) by pulling on the diagonal strap (16).
8. Pull the diagonal strap (16) behind the head end of the infant carrier over the adapter (13).
9. Thread the diagonal strap (16) into the belt holder (12). Make sure that you do not twist the vehicle seat belt.
10. Tighten the diagonal strap (16).
    ⚠ **DANGER!** Make sure that the vehicle seat buckle (18) is not in the belt guide (03) under any circumstances and is not so far forward that it is in front of the belt guide (03) (in direction of travel). If the vehicle seat buckle is (18) in the belt guides (03) or in front of the belt guides (03), place the infant carrier on a different seat. If you have any doubts about installing the seat correctly, please contact your dealer.
11. Unscrew the SICT (26) anti-clockwise (on the side closer to the vehicle door) until it has a distance of 5 mm to the vehicle door or has been unscrewed to the maximum.
    The unscrewed SICT (26) provides additional protection in the event of a side impact.

⚠ For the safety of your child, before every journey in the car check that:

- the infant carrier is fastened against the direction of travel,
- the infant carrier is only installed on the front passenger seat if **no** front airbag can strike the infant carrier,
- the infant carrier is secured using a 3-point belt,
- the lap belt section runs through both belt guides (03) on the infant carrier,
- The diagonal strap (16) runs through the belt holder (12),
- the vehicle seat buckle (18) is not in the belt guide or in front of the belt guide (03),
- the vehicle seat belt is tightened up and not twisted,
- the SICT (26) is installed and used correctly.


10. USE WITH PUSHCHAIRS


Please refer to the user instructions supplied with your pushchair.

The infant carrier can be used as a Travel System on all pushchair frames which are approved for use with BRITAX/RÖMER infant carriers.


⚠ **WARNING!** This Travel System is not suitable...
... for transporting more than one child.
... for commercial use.
... in conjunction with other frames.
... as a substitute for a cot or a cradle. Carrycots, pushchairs and buggies must only be used to transport babies or children.


⚠ **WARNING!** Always strap your baby into the infant carrier and ensure that the infant carrier is securely fastened to the pushchair. Never lift or push the pushchair by the infant carrier. Always apply the brake before fitting the infant carrier onto the pushchair or removing it.

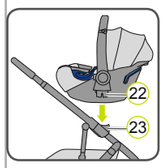

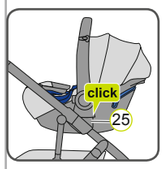

Fitting the infant carrier to a pushchair
1. Always apply the brake as shown in the instructions provided with the pushchair.
2. Prepare the pushchair for the Travel System as described in the instructions for the pushchair (e.g. adjust the pushchair seat, unhook the seat cover).
3. With the infant carrier in a rearward-facing position, lift it above the pushchair.
   ⚠ **WARNING!** Never try to attach the infant carrier to the pushchair in a forward-facing position.
4. Engage the fixation prongs (22) of the infant carrier into the fixation slots (23) on both sides. The control indicators (25) on both sides of the infant carrier must be green.
   ⚠ **WARNING!** Ensure that the infant carrier is securely attached to the pushchair by pulling the handle (04) upwards.

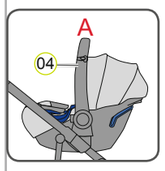

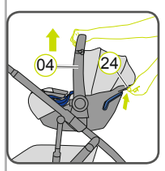

Removing the infant carrier from a pushchair
1. Always apply the brake as shown in the instructions provided with the pushchair.
2. Ensure that the handle (04) is in the upper position A (see chapter 8.1 ADJUSTING THE HANDLE).
3. Pull and hold the grey release latch (24).
4. Lift the infant carrier until the fixation prongs (22) release from the fixation slots (23).
   ⚠ **WARNING!** Keep a firm grip on the infant carrier while doing this.
5. Remove the infant carrier from the pushchair.

If you have any further questions regarding the use of the carrier, please feel free to contact us:

BRITAX RÖMER
Kindersicherheit GmbH
Theodor-Heuss-Straße 9
D-89340 Leipheim
Germany
T.: +49 (0) 8221 3670-199/-299
F.: +49 (0) 8221 3670-210
E.: service.de@britax.com
www.britax.com

BRITAX EXCELSIOR LIMITED
1 Churchill Way West
Andover
Hampshire SP10 3UW
United Kingdom
T.: +44 (0) 1264 333343
F.: +44 (0) 1264 334146
E.: service.uk@britax.com
www.britax.com